




KLAMATH TAIL RACK PACK™


KLAMATH TAIL RACK PACK™ MOUNTING INSTRUCTIONS

MOUNTING USING GL TAIL RACK™

For easier installation, remove lid and divider.

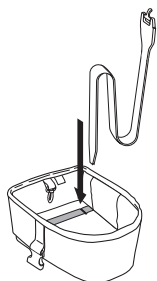

Straps longer than actual size here for illustrative purposes.

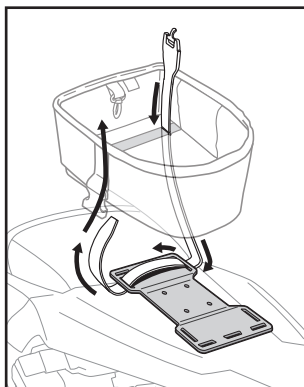


For best compatibility with Klamath, position GL Tail Rack lengthwise. Thread Pronghorn Strap™, small end down, through the slot on the bottom of Klamath. Pass the strap through the slots on the tail rack, then back through the opposite slot on Klamath. Repeat for second strap.


NOTE: This method works with virtually every tail rack.

MOUNTING USING FENDER

For easier installation, remove lid and divider.

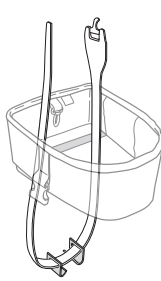


Straps longer than actual size here for illustrative purposes.

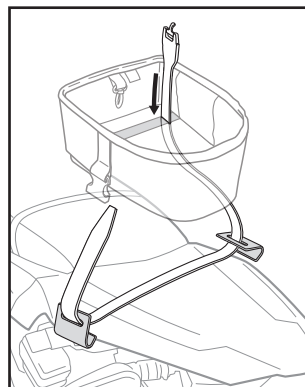


Thread Pronghorn Strap, small end down, through the slot on the bottom of Klamath. Slide on two fender hooks, facing each other as shown. Position Klamath as desired, secure hooks on either side of fender. Repeat for second strap.

! When using fender hooks, always mount Klamath with at least one redundant tether to prevent it from separating from bike.

SECURING ANCHOR STRAPS

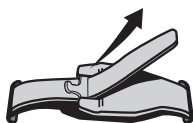


1 Push strap end through aluminum fastener.

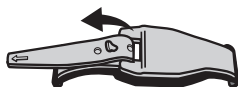

2 Pull to apply tension by stretching Pronghorn Strap slightly, and secure on fastener "prong."

! Ride a short distance and re-tension anchor straps. Check and re-tighten all straps at stops, as gear can shift and compress.

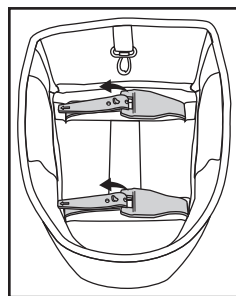

KLAMATH TAIL RACK PACK™ PACKING TIPS

- The pack's outer shell is adventure proof - not waterproof. Pack moisture-sensitive gear in optional waterproof Dry Pod (not included).
- Go light! Do not overstuff or over pack. Avoid packing heavy objects above seat height and behind rear axle.
- Pack hard, sharp or metallic gear in protective wrappers and/or sleeves. Also protect from contact with other solid objects that may abrade fabric such as hard metal rack surfaces.
- Divider can be repositioned or removed. Use foam block or shock-resistant case to protect camera equipment or other delicate gear.
- Avoid exposure to chemicals that may degrade fabric, such as insect repellents containing DEET.
- Hand wash with mild soap and warm water. Hang to air dry. DO NOT MACHINE WASH.

