

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT F R
 ANCLAJE ESPECCEFICO PARA

KAWASAKI Z750 2007

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

1

Q.TY n.1

2

SUPPORTO
 SUPPORT
 SUPPORT
 HALTERUNG
 SOPORTE

Q.TY n.2(Dx-Sx)

3

VITE TEF M8x50mm
 SCREW M8x50mm
 VIS M8x50mm
 SCHRAUBE M8x50mm
 TORNILLO M8x50mm

Q.TY n.4

4

DISTANZIALE f14x20mm
 Foro f8,5mm, V009

SPACER
 ENTRETOISE
 DISTANZSTUECK
 DISTANCIADOR

Q.TY n.4

5

VITE TSCEI M6x16mm
 INOX

SCREW M6x16mm
 VIS M6x16mm
 SCHRAUBE M6x16mm
 TORNILLO M6x16mm



Q.TY n.4

6

RONDELLA
SVASATA f6mm
 200R0N

WASHER Ø6mm
 RONDELLE Ø6mm
 SCHEIBE Ø6mm
 ARANDELA VACIADA Ø6mm

Q.TY n.4

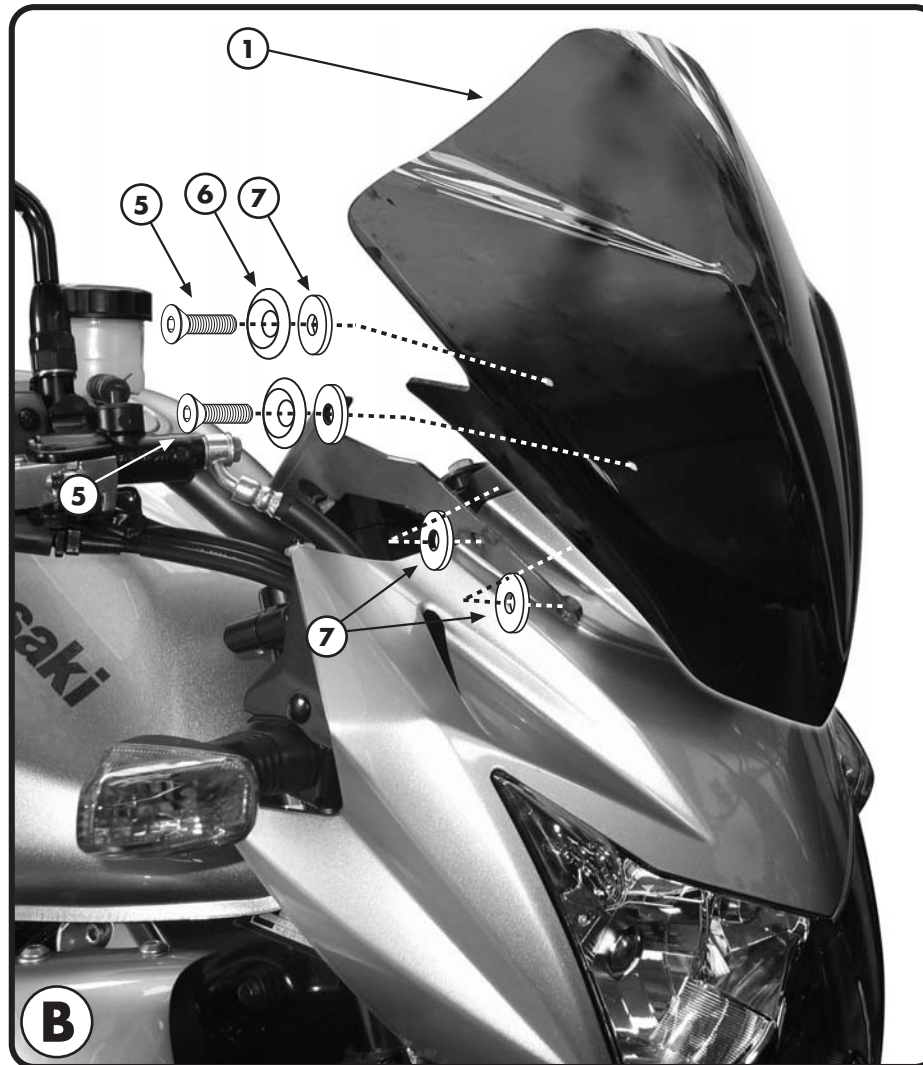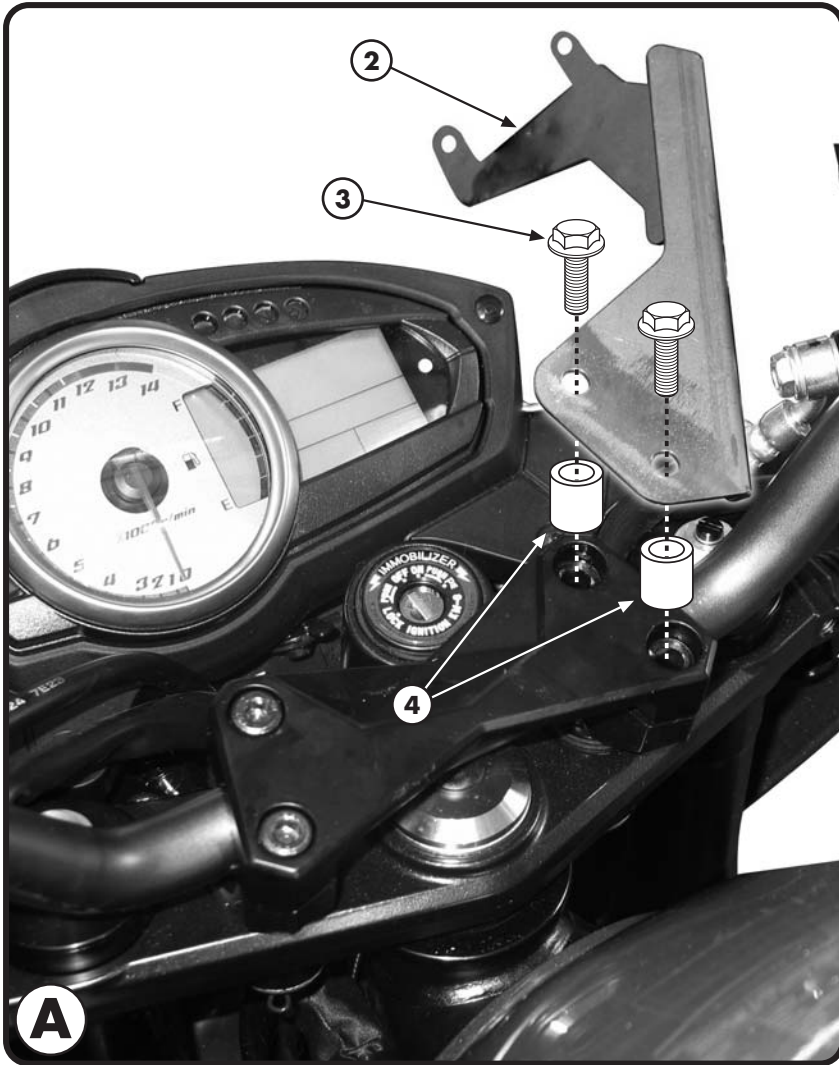

7

RONDELLA IN GOMMA
 ORONG

RUBBER WASHER
 RONDELLE EN CAOUTCHOUC
 GUMMI SCHEIBE
 ARANDELA DE GOMA

Q.TY n.8

**ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT F R
ANCLAJE ESPECÍFICO PARA**

KAWASAKI Z750 2007

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

I ISTRUZIONI DI MONTAGGIO

1. MONTARE I SUPPORTI N°2 COME INDICATO IN FOTOGRAFIA A;
2. MONTARE IL PARTICOLARE N°1 (NON INCLUSO) COME INDICATO IN FOTOGRAFIA B;
3. ULTIMARE IL MONTAGGIO VERIFICANDO CHE TUTTE LE VITI SIANO SERRATE BENE (VITI M6=9,6Nm - VITI M8=23Nm)

GB MOUNTING INSTRUCTIONS

1. SET THE SUPPORTS N°2 AS YOU CAN SEE FROM PICTURE A;
2. SET DETAIL N°1 (NOT INCLUDED) AS YOU CAN SEE FROM PICTURE B;
3. CHECK THAT ALL THE SCREWS ARE WELL TIGHTENED (VIS M6=9,6Nm - VIS M8=23Nm).

F INSTRUCTIONS DE MONTAGE

1. MONTER LES SUPPORTS N°2 COMME INDIQUE EN PHOTO A;
2. MONTER LA PIECE N°1 (NON INCLUSE) COMME INDIQUE EN PHOTO B;
3. TERMINER LE MONTAGE EN CONTROLANT LE BON SERRAGE DE TOUTES LES VIS (VIS M6=9,6Nm - VIS M8=23Nm).

D BAUANLEITUNG

1. MONTIEREN SIE DIE HALTERUNGEN NR. 2 WIE IM BILD A BESCHRIEBEN;
2. MONTIEREN SIE TEIL NR. 1 (NICHT VORHANDEN) WIE IM BILD B BESCHRIEBEN;
3. ZULETZT ÜBERPRÜFEN SIE, DASS ALLE SCHRAUBEN FESTGEZOGEN WURDEN (SCHRAUBEN M6 = 9,6 NM - SCHRAUBEN M8 = 23NM).

ES

INSTRUCCIONES DE MONTAJE

1. MONTAR LOS SOPORTES N° 2 SEGÚN LO INDICADO EN LA FOTOGRAFÍA A;
2. MONTAR EL DETALLE N° 1 (NO INCLUIDO) SEGÚN LO INDICADO EN LA FOTOGRAFÍA B;
3. COMPLETAR EL MONTAJE VERIFICANDO QUE TODOS LOS TORNILLOS ESTÉN PERFECTAMENTE AJUSTADOS (TORNILLOS M6=9,6Nm - TORNILLOS M8=23Nm)