
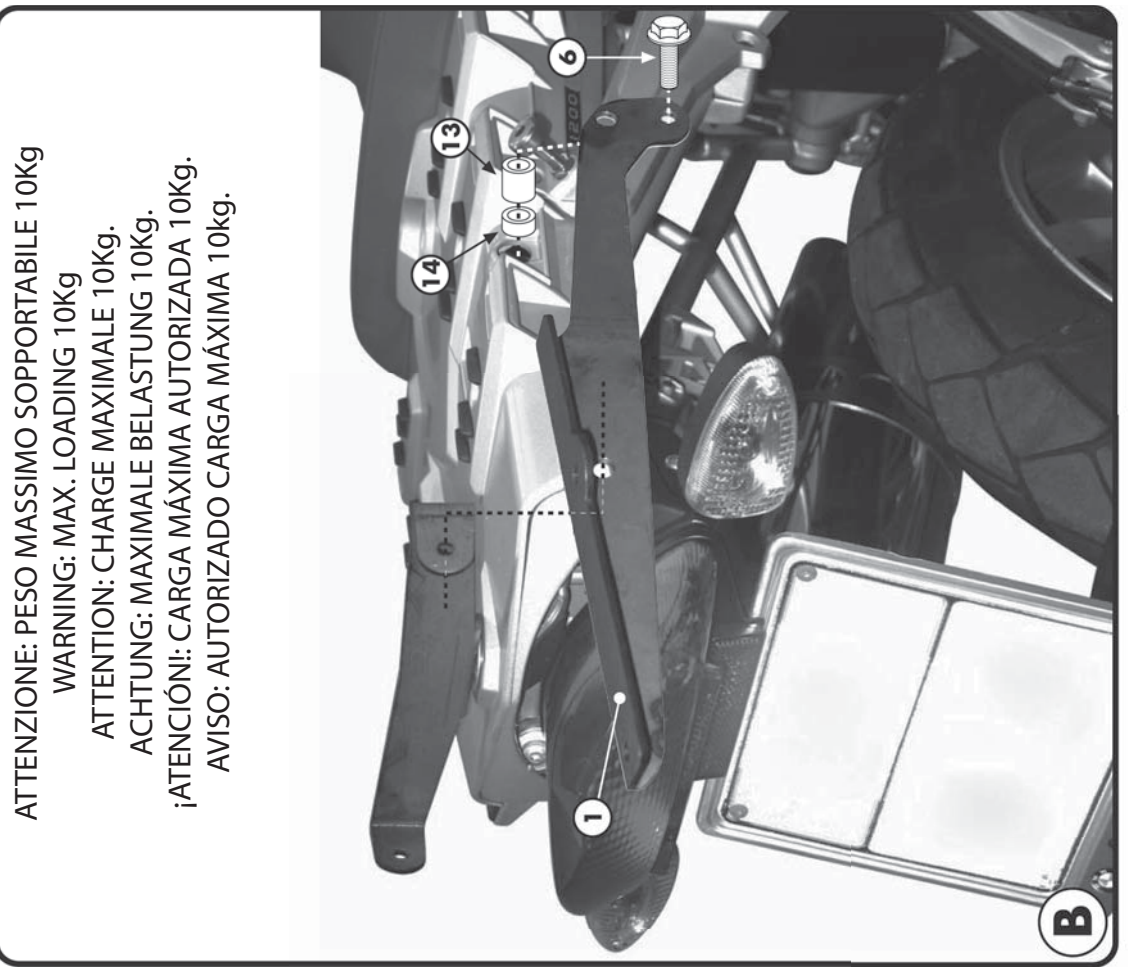
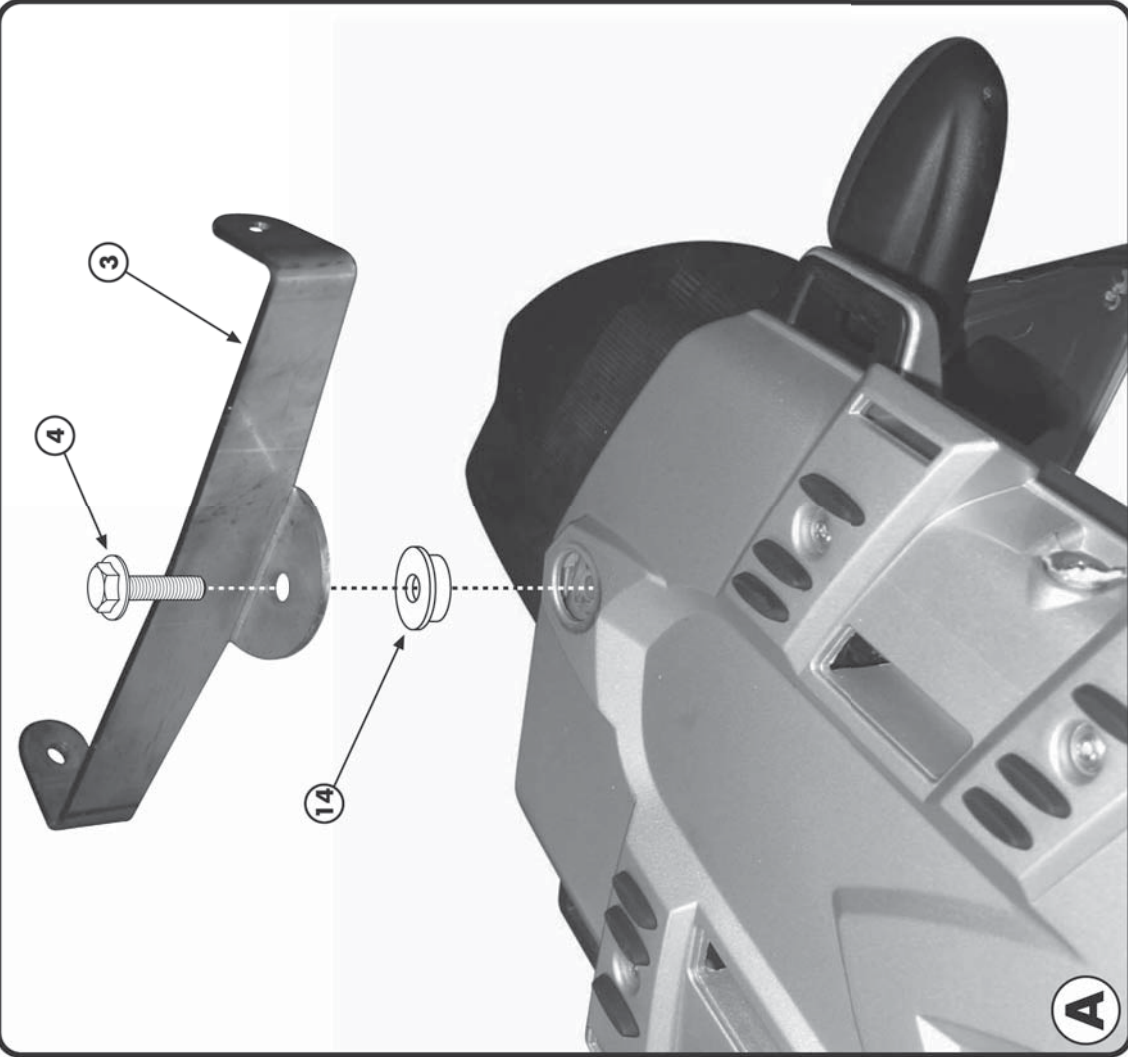
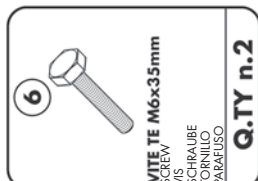
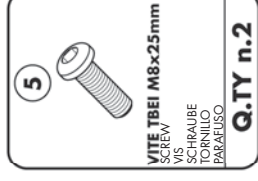
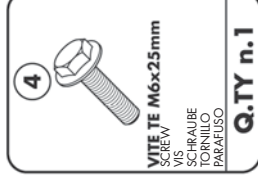
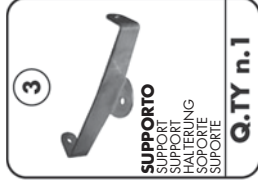


BMW R1200GS '04/'08

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE
 BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

SR689 - KR689

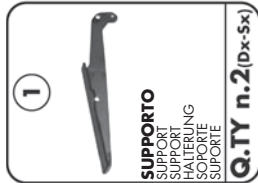


ATTENZIONE: PESO MASSIMO SOPPORTABILE 10Kg
 WARNING: MAX. LOADING 10Kg
 ATTENTION: CHARGE MAXIMALE 10Kg.
 ACHTUNG: MAXIMALE BELASTUNG 10Kg.
 ¡ATENCIÓN!: CARGA MÁXIMA AUTORIZADA 10Kg.
 AVISO: AUTORIZADO CARGA MÁXIMA 10kg.

PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER
PORTE-VALISE SPÉCIFIQUE - SPEZIFISCHER KOFFER-TRÄGER
PORTA-EQUIPAJE ESPECÍFICO - TRANSPORTADOR ESPECÍFICO

BMW R1200GS '04/'08

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE
BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

13  **DISTANZIALE Ø18x7mm**
SPACER Ø8,5mm, V497
ENTREDOSE
DISANZULECK
ESPACADOR

14  **COMPONENTI ORIGINALI**
ORIGINAL PARTS
PIÉCES ORIGINALES
ORIGINALBAUTEILE
COMPONENTES ORIGINALES
COMPONENTES ORIGINAIS

15  **RONDELLA f8x20mm**
WASHER
RONDELLE
SCHEIBE
ARANDELA
ARRUELA

16  **PIASTRA MONOKEY**
PLATINE
PLATINE
PLATTE
PARTELA
PRATO

17  **RONDELLA f8x14mm**
WASHER
RONDELLE
SCHEIBE
ARANDELA
ARRUELA

18  **VITE T8E1 M8x30mm**
SCREW
VIS
SCHRAUBE
TORNILLO
PARAFUSO

19  **DADO A.B. M8**
NUT
ECROU
MUTTER
TUERCA
PORCA

7  **RONDELLA Ø8mm**
WASHER
RONDELLE
SCHEIBE
ARANDELA
ARRUELA



8  **VITE TCE1 M6x35mm**
SCREW
VIS
SCHRAUBE
TORNILLO
PARAFUSO

9  **RONDELLA Ø6mm**
WASHER
RONDELLE
SCHEIBE
ARANDELA
ARRUELA

10  **RONDELLA Ø6x20mm**
WASHER
RONDELLE
SCHEIBE
ARANDELA
ARRUELA

11  **DADO A.B. M6**
NUT
ECROU
MUTTER
TUERCA
PORCA

12  **COPRIFORO**
2691

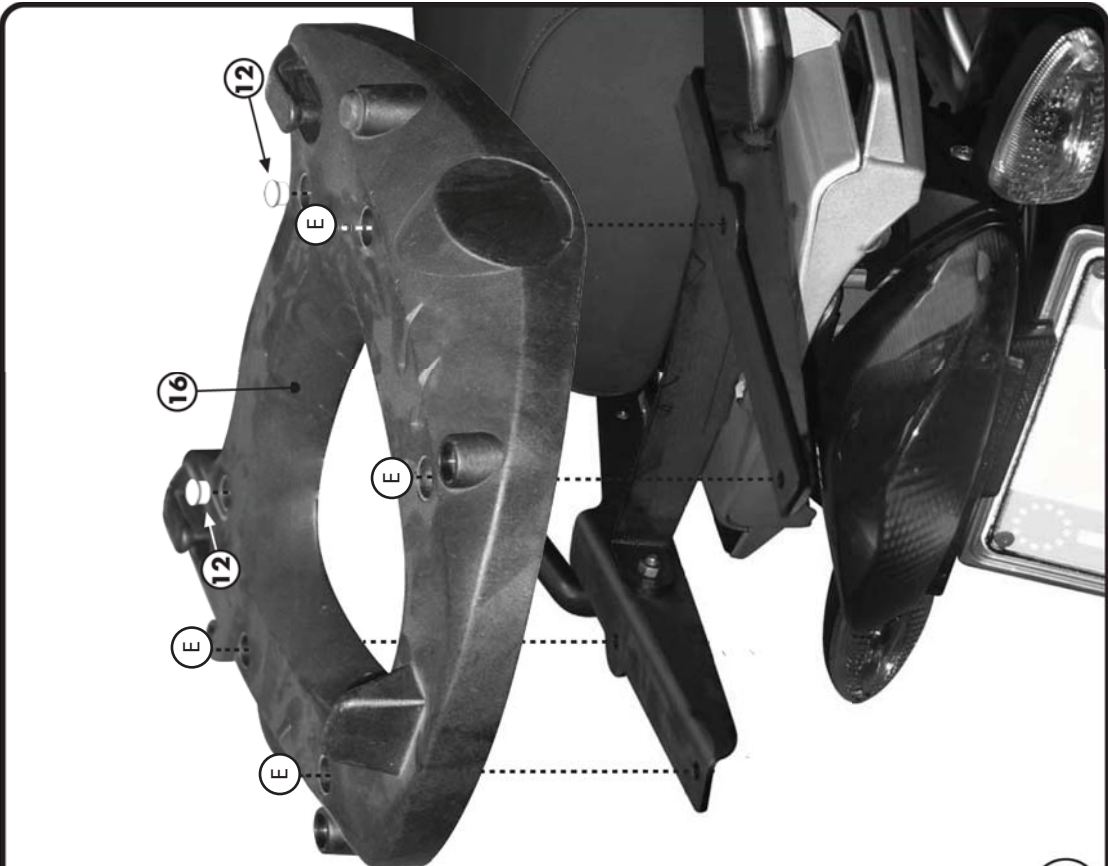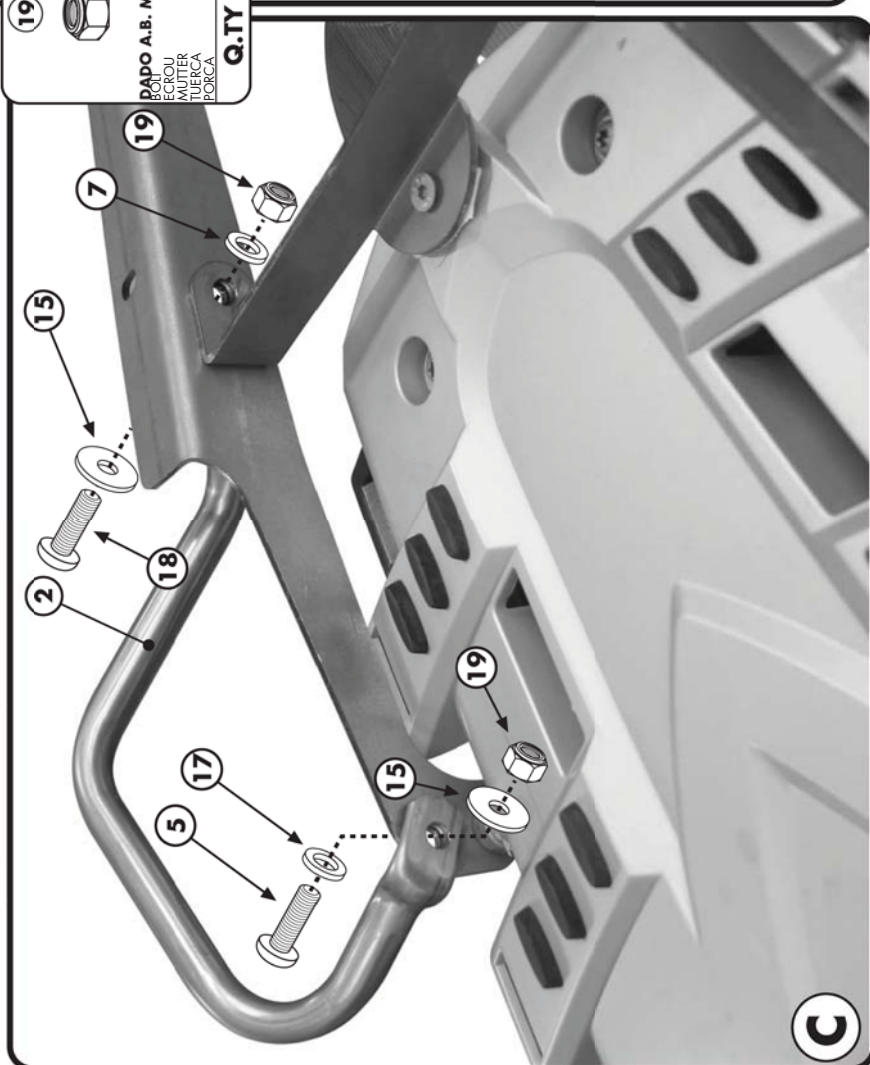

SR689 - KR689

ISTRUZIONI DI MONTAGGIO · MOUNTING INSTRUCTIONS · INSTRUCTIONS DE MONTAGE
BAUANLEITUNG · INSTRUCCIONES DE MONTAJE · INSTRUÇÕES DE MONTAGEM

